WARRANTY CARD

© 2014 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved.
Distributed by Jarden Consumer Solutions of India Private Limited, Unit B-204, Universal Business Park, Off Saki Vihar Road, Chandivali Farm Road, Andheri (E) Mumbai 400 072, India. 2 Year Limited Warranty - see inside for details. Sunbeam Products, Inc. and Jarden Consumer Solutions of India Private Limited are subsidiaries of Jarden Corporation (NYSE: JAH).
1-800-102-6300

www.oster.in

Model No. : _____

Date of Purchase : _____

Dealer's Stamp : _____

P.N. 9100180000790
2612_2616_2616NA-049_14EM1
GCDS-OST36130-JC

Printed in PRC

MODELS **2612-049 / 2616-049 2616NA-049**

INSTRUCTION MANUAL

HAND BLENDER

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

IMPORTANT SAFEGUARDS

When using your Hand Blender, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR HAND BLENDER.

1. Always operate the Hand Blender from power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Close supervision is necessary when Hand Blender is used by or near children, or incapacitated persons. **DO NOT** allow children to use it as a toy.
3. **DO NOT** operate Hand Blender with a damaged cord or plug, after the appliance malfunctions or if it is dropped or damaged in any manner. Return appliance to the nearest Oster® Authorized Service Center for examination, repair or electrical or mechanical adjustment.
4. **DO NOT** twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split particularly where it enters the unit.
5. To protect against risk of electrical shock, **DO NOT** put Hand Blender motor in water or other liquid. This may cause personal injury and/or damage to the product.
6. After each operation, allow the Hand Blender to cool for 3 minutes before using it again.
7. **DO NOT** process food containing hard objects that cannot be safely broken up by the blade.
8. To protect against fire, **DO NOT** operate the unit in the presence of explosive and/or flammable fumes.
9. This Hand Blender should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool, etc., where the likelihood of immersion or splashing could occur.
10. Switch off and unplug from outlet while not in use, before putting on or taking off parts and before cleaning. Remove by grasping the plug; **DO NOT** pull on the cord.
11. Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from blade during operation to reduce the risk of injury to persons and/or damage to the Hand Blender. A spatula or scraper may be used when the appliance is not in operation.
12. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
13. **DO NOT** place Hand Blender on or near a hot burner or in a heated oven.
14. **DO NOT** use over a stove or other heat source. When mixing soups or other hot foods or liquids, remove the saucepan from the heat source before using the Hand Blender.
15. This appliance is **NOT** intended to chop ice. Add ice to beverage after blending.
16. Blades are sharp. Handle with extreme care.
17. **DO NOT** use Hand Blender for other than its intended use.
18. **DO NOT** leave Hand Blender unattended while it is operating.
19. The use of attachments not recommended or sold by manufacturer may cause fire, electrical shock or injury.
20. **DO NOT** let cord hang over edge of table or countertop.
21. **DO NOT** use outdoors or for commercial purposes.

22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised and have been given instructions concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
23. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.
24. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
25. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments farm houses by clients in hotels, motels and other residential type environments bed and breakfast type environments.

THIS UNIT IS FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

SHORT POWER SUPPLY CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

2612_2616_2616WA-049_14EM1.indd 2-3 9/12/14 11:50 AM

DESCRIPTION OF THE APPLIANCE

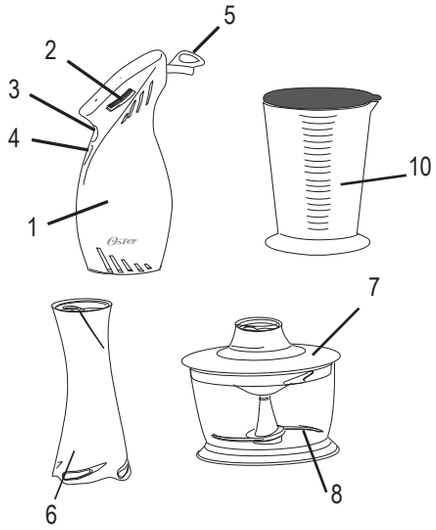

2612-049

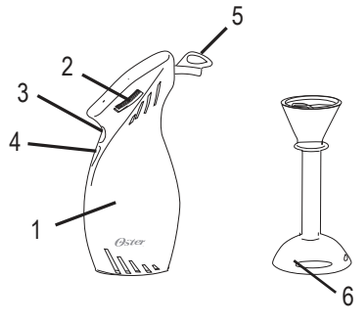

2616NA-049

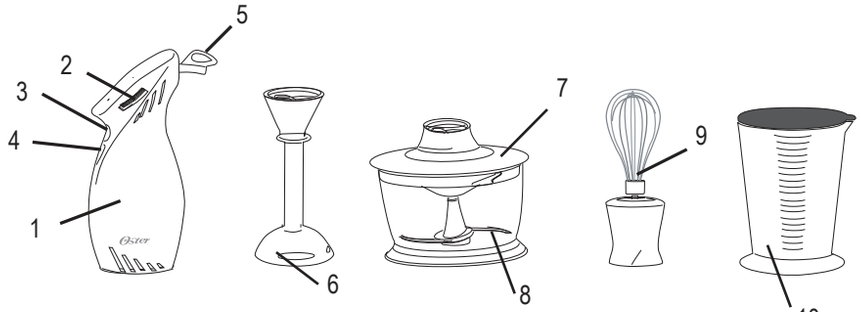

2616-049

1. Motor Housing
2. Speed Control Dial
3. Slow Speed Button
4. High Speed Button
5. Hanging Loop
6. Beater Shaft/ Blade Housing
7. Chopping Bowl with cover and bottom grip
8. Chopping Blade
9. Whisk
10. Mixing/ Measuring Cup with Lid

BEFORE USING THE HAND BLENDER

Read and follow all the instructions for this section on Use and Care and find a place to keep this instruction manual ready for future reference.

For your convenience, record the complete model number (located on the back of the motor) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that the warranty service is required.

NOTE: The use of attachments not recommended or sold by the manufacturer may cause fire, electrical shock, injury or damage to the product.

USING THE HAND BLENDER

Your Hand Blender is a two-part assembly. The upper part contains the Motor Housing and the Speed Buttons. The lower part contains the Blade Housing, the Chopper Attachment (models 2612-049 & 2616-049 only) or the Whisk (model 2616-049 only).

To Lock: Hold the Motor Housing in the right hand and the Blade Housing, the Chop Housing or the Whisk in the left. Attach the Motor Housing up to the Blade Housing, the Chopping Bowl (models 2612-049 & 2616-049 only) or Whisk (model 2616-049 only). Rotate the Motor Housing to the left. The assembly locks firmly.

To Unlock: Hold the Motor Housing in the right hand and the Blade Housing, the Chopping Bowl (models 2612-049 & 2616-049) or Whisk (model 2616-049 only) in the left. Rotate the Motor Housing to the right to separate the units.

TO OPERATE THE HAND BLENDER

- Place dual purpose lid on the bottom of the Mixing/Measuring Cup (models 2612-049 & 2616-049 only) for added stability
- Immerse the Blade Housing completely into ingredients
- Depress the High or Low button and begin mixing ingredients by moving the appliance up and down and in circles. Adjust speed as necessary. For continuous mixing, maintain pressure on button for a maximum of 1 minute
- Hold the Hand Blender firmly
  NOTE: During mixing, it is normal for suction to be created at the bottom of the container
- When desired consistency has been reached, release Button and lift the Hand Blender from mixture. To prevent splashing, always release Button before removing Hand Blender from ingredients

2612_2616_2616WA-049_14EM1.indd 4-5 9/12/14 11:50 AM

CAUTION: To extend the life of this appliance, never let it operate continuously for more than 1 minute at a time. After 1 minute of continuous operation, release Button and let appliance rest for 3 minutes before using it again.

WARNING: Do not use Hand Blender in saucepan directly on stovetop.
Remove pan from heat before mixing.

MIXING/MEASURING CUP INFORMATION (MODELS 2612-049 & 2616-049 ONLY)

- The lid can be easily used as a cover for storage
- For added stability, use the dual purpose lid on the base of the Mixing/Measuring Cup
- The Cup which is included with your Hand Blender functions as a mixing cup, a measuring cup and can also be used for storage

MEASURING CHART FOR BLENDING CUP

MILLILITERS	CUPS	OUNCES
50	.21	1.70
100	.42	3.40
150	.63	5.00
200	.85	6.76
250	1.10	8.50
300	1.25	10.00
350	1.50	12.00
400	1.70	13.50
450	1.90	15.25
500	2.10	17.00
550	2.32	18.50
600	2.50	20.25
650	2.75	22.00
700	3.00	24.00

REMOVAL OF BEATER SHAFT

Grasp beater shaft firmly and rotate Motor Housing to the right.

USING THE CHOPPER ATTACHMENT (MODELS 2612-049 & 2616-049 ONLY)

The chopper accessory is ideal for chopping a wide range of vegetables, dried fruits, nuts, etc.

- Insert Chopping Blade into the Chopping Bowl
- For best results, cut large ingredients into pieces of approximately 1/2-inch cubed before chopping
  NOTE: Do not chop large ice cubes or extremely hard foods, such as whole nutmegs, coffee beans, dried corn and grains.
- Secure the Chopper cover by setting on the Bowl and turning to the right until firmly locked into place. The upper shaft of the Chopping Blade will fit into the receiving hole in the underside of the Cover
- Attach the Motor Housing into the top of the Bowl cover and turn to the right until the Motor Housing is firmly locked into place. Plug cord into convenient outlet
- The chopper has two speeds. Press and hold the appropriate button to switch the Hand Blender on. Release the button to switch the unit off

- Use the slow speed where possible especially if you want to chop the food into bigger pieces. The high speed can be used for chopping the food to small pieces or for pureed foods
- You can adjust the speed of the unit with the Speed Control when using slow speed or high speed function
- Set the Speed Control Dial to the desired speed and depress the slow or high speed button as desired
- If the ingredients stick to the Chopper Bowl sides, loosen them by adding a small amount of liquid or by using a spatula to scrape the food back into the inner part of the Bowl
- Release the Speed Control Button and allow the blade to come to a complete stop before removing the Bowl Cover by turning cover to the left. Take care when removing the Blade and hold only by the shaft handle as the metal blade is sharp

  NOTE: Do not clean blades with fingers but use a spoon or spatula to scrape food into Bowl after Blade is removed.

  CAUTION: Unplug the appliance before attaching the chopper attachment. Put the food ingredients in the Chopper Bowl, secure the Bowl Cover to the Chopping Bowl and attach the Motor Housing to it. Use the slow speed, especially if you are chopping lumps in the ingredients. The high speed can be used as a finishing touch.

USING THE WHISK

(MODEL 2616-049 ONLY)

- Use the whisk only to prepare whip cream, egg whites, mousses or quick desserts.
- Insert the Whisk into the Motor Housing until it is locked
- Immerse the Whisk into bowl where you have placed the ingredients and push the Slow Speed Button. It is recommended to use a wide bowl

  CAUTION: To extend the life of this appliance, never let it operate continuously for more than 1 minute at a time. After 1 minute of continuous operation, release Button and let appliance rest for 3 minutes before using it again.

- When desired consistency has been reached, release Button and lift the Hand Blender from mixture. To prevent splashing, always release button before removing Hand Blender from ingredients
- To remove the Whisk, turn it to the left and remove it from the Motor Housing

2612_2616_2616WA-049_14EM1.indd 6-7 9/12/14 11:50 AM

CARE AND CLEANING

Be sure unit is unplugged before attempting to clean.

Motor unit should be wiped clean with a damp cloth or sponge. NEVER immerse motor unit in water.

After using your Hand Blender, the Blades, Mixing Cup, Chopper Bowl and/or Whisk may be washed by hand with mild soap and water. Wash Lid and/or Chopper Bowl Cover by hand using warm, soapy water with a cloth or sponge. See Page 4 for the attachments included in each model.

CAUTION: Blades are sharp. Handle carefully.

Make sure all parts are completely dry before attempting to use again.

NOTE: Do not place Hand Blender components in dishwasher.

STORAGE

Unplug unit and store in a clean, dry place. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit as it could cause the cord to fray and break.

WARRANTY

Jarden Consumer Solutions of India Private Limited (hereinafter referred to as “JCS”) warrants that, for a period of two (2) years from the date of purchase of this product as evidenced in the cash memo (“Warranty Period”), this product will be free from defects in material and workmanship (the “Warranty”). Please preserve the warranty card and the cash memo of the product duly stamped and signed by the dealer, as this will be required for any claims under this Warranty.

- The rights and benefits under this Warranty are additional to your statutory rights, which are not affected by this Warranty.
- During the Warranty Period, JCS, at its sole choice, will either repair or replace this product or any component of the product found to be defective free of cost through (the dealer from whom the product was purchased or through the service center listed in the card – business people to confirm), provided that:
  - JCS is promptly informed of the defect;
  - The product has not been altered in any way or subjected to misuse or repair by the person other than a person authorized by JCS;
  - This Warranty, duly filled, stamped and signed by the dealer is made available.
- The Warranty provided herein is towards the original purchaser and is not transferrable to any third party.
- Any repaired or replaced product will be warranted on these terms for the remaining portion of the Warranty in the country where the product was purchased.
- Liability for consequential loss or damage is neither accepted nor is it implied.
- This Warranty is in lieu of all others expressed or implied and does not cover the following:
  a. If product was use in any manner other than the intended use.
  b. If the product has not been used according to the instruction manual/user’s manual, included with the product.
  c. If the defects are caused by improper use or reckless use.
  d. If the product was altered or repaired by anyone other than those authorized by JCS.
  e. If installation of the product is not done as per the printed instructions provided along with the product.
  f. If the defects are caused by fire, flood, and other act of god.
  g. If the defects are caused by use of incorrect current or voltage or faulty electric power supply.
  h. Normal wear and tear of parts and accessories resulting from regular use.
  i. Damage resulting from transportation, accidents, mishandling or negligence on the part of the consumer.
  j. The following part/components:
     - Broken glass or ceramic parts
     - Light bulb
     - Accessories
  k. If the product is put to industrial or commercial use.
     - JCS will not be responsible for any delay in servicing due to non-availability of any components or due to reasons beyond the control of JCS.
     - Any failure of the product to perform any purpose other than the intended purpose shall not be considered as a default under this warranty.
     - In any event, if JCS becomes liable for damages incurred in connection with these presents, then the liability of JCS will be limited to the amount equal to the sale invoice amount paid by you.

Waste electrical products should not be disposed off with household waste. Please recycle where facilities exist.

2612_2616_2616WA-049_14EM1.indd 8-9 9/12/14 11:50 AM

AUTHORIZED SERVICE CENTERS

Region	State	City	Name	Address	Contact Person	Contact No.
East	West Bengal	Kolkata	Jeeves Consumer Services Pvt Ltd	356, Jodhpur Park, Kolkata - 700068	Someswar Basu	(033) 40012100
	West Bengal	Kolkata	Southern Service	6/19A, Prince Anwarshah Road, Poddar Nagar, Kolkata - 700068	Subrata Manna	(033) 24729651 / 65488822
	West Bengal	Kolkata	Baishanu Service Care	55D, Adaya Nath Saha Road, Lake Town, Near Jaya Cinema, Kolkata - 700048	Piyush Nandan	(033) 40664210
	West Bengal	Howrah	Time n Service	37 & 38, Mohenath Lane, Salkia, Howrah - 711106	Tapas Hazra	(033) 65639720
	West Bengal	Hooghly	DNP Enterprises	52, Sahaganj Main Road, PO. Sahaganj, Near Bandel Station, Hooghly - 712104	Indrajit Bag	(0) 9163668360
	West Bengal	Barrackpore	Balaji Enterprise	4/E/A Barasat Road, Barrackpore, Dist. North 24 Parganas, Near 15 No. Rail Gate, Barrackpore - 700122	Pradip Kr Ghosh	(033) 25451224
	West Bengal	Siliguri	S D Electronics	Deys Lodge,138/69/57, Nazrul Sarani, Ashrampara, Siliguri - 734001	Arup Dey	(0353) 2526028
	West Bengal	Asanol	Yes Service	Hutton Road, Near Mahal Banquet Marriage Hall, Asansol - 713301	Sarfaraz Ahmed	(03228) 2280029
	Assam	Guwahati	Multi Track Services	G S Road, Ground Floor, Bora Service Station, Ulubari, Guwahati - 781007	Kallol Dutta	(0361) 2457296

AUTHORIZED SERVICE CENTERS

North	Delhi	Delhi	Jeeves Consumer Services Pvt Ltd.	# E-10, Arya Samaj Road, School Road, Uttam Nagar, Delhi - 1100059	Md Khalid Pervez	(011) 45785915
	Delhi	Delhi	Jeeves Consumer Services Pvt Ltd.	R-32, 2nd Floor, Vikas Marg, Shakarpur, Opp. Heera Sweets, Metro Pillar # 46 , Delhi - 1100092	Manjeet Singh	(011) 47754764
	Delhi	Delhi	S T Services	M-131, 1st Floor, Guru Harkrishan Nagar, Paschim Vihar, New Delhi - 110041	Vipin Yadav	(011) 32958438 / 45586987
	Haryana	Gurgaon	Jeeves Consumer Services Pvt Ltd.	4/18 A, 1st Floor, Laxmi Garden, Behind Police Chowki, Khandsa Road, Gurgaon-122001	Karamvir Fogaat	(0124) 4073434
	Haryana	Faridabad	Jeeves Consumer Services Pvt Ltd.	5H-49,1st Floor, NIT Faridabad -121001	Manoj Kumar Panwar	(0129) 4163003
	Uttar Pradesh	Noida	Jeeves Consumer Services Pvt Ltd.	1st Floor, Above Punjab ATM, Sector-22, Chaura More Main Road, Near Oriental Bank of Commerce, Opp.Rajkiya Inter College, Noida, U.P - 201301	Devender Singh	(0120) 4162644
	Uttar Pradesh	Lucknow	Swastik Customer Care	A-1/3, SEC-H Aliganj, Near Kendriya Bhawan, Lucknow - 226020	Uma Shankar Mishra	(0522) 3298003 / 4102581 / 4102582
	Uttar Pradesh	Kanpur	Shubham Electronics	192,Manohar Nagar Barra -3 , Opp Deepshika Guest House, Kanpur - 208027	Suman Gupta	(0512) 2283394 / 2602029
	Uttar Pradesh	Agra	Sai Electronics	25/113, Gandhi Nagar, Agra - 282 003	Ajay Singhal / Sunil	(0562) 3297005
	Haryana	Ambala	Telecare	Old Hospital Road, Bara Thakur Dwara, Opp. Polytechnic, Ambala City - 134003	Devinder Sharma	(0171) 25567369
	Haryana	Sonipat	Saibaba Enterprises	House No. 1510, Sector - 15, Sonipat - 131001	Pramod Sharma	(0130) 6411206
	Haryana	Karnal	Jeeves Consumer Services Pvt Ltd.	Shop # 50, Ground Floor, Mayapuri, Rajiv Gandhi Marg/ Near Raj Palace, Meeraghati Chowk, Karnal - 132001	Neeraj Sharma	(0184) 4022201
	Punjab	Mohali	Jeeves Consumer Services Pvt Ltd.	# SCF-4, Basement, The High Land Society, NAV, Baltana, Zirakhpur, Mohali-140603	Shiv Dhanda	(0176) 2652574
	Punjab	Ludhiana	Jeeves Consumer Services Pvt Ltd.	Shop # 18B, Dhyan Singh Commercial Complex, Opp. Bus Stand, Ludhiana - 141001	Gurbeer Singh	(0161) 2444002
	Punjab	Jallandhar	Jeeves Consumer Services Pvt Ltd.	EH-31, Laddowali Road, Opposite Gurudwara, Jalandhar - 144001	Ashok Kumar	(0181) 2221707
	Punjab	Amritsar	Keerat Electronics	Naraingarh Bazar, Shaheed Bhagat Singh Road, Chheharta, Amritsar - 143 001	Sukhdeep / Mantreet Singh	(0183) 2450095
	Himachal	Shimla	Suvidha Electronics	Mehta Niwas, Ground Floor, Near Himfead Building, B C S, New Shimla - 171009	Rajesh Kumar	(0) 9816457886
	Himachal	Mandi	Kuldeep Electro Care	Neear FCI Godown, Kehanwal Road, Ram Nagar, Mandi - 175001	Kuldeep Singh	(01905) 222140 / 329574
	Rajasthan	Jaipur	Jeeves Consumer Services Pvt Ltd.	A-79,Subash Nagar Shopping Centre, Jaipur - 302016	Vipendra Singh	(0141) 4035102

2612_2616_2616WA-049_14EM1.indd 10-11 9/12/14 11:50 AM

AUTHORIZED SERVICE CENTERS

West	Maharashtra	Mumbai	S P Services	Shop No. 10, Abdul Sattar Compound, Fitwala Road, Opp. Satguru Darshan Bldg., Near Railway Station, Elphinston Road (West), Mumbai - 400013	Palsingh Panyari	(022) 24326726 / 24312623
	Maharashtra	Mumbai	Jeeves Consumer Services Pvt Ltd.	Plot No 27/5, Pawani Chowk, Opp Mulund Darshan Building, Mulund Colony, Mulund (W), Mumbai - 400082	Ramesh Yadav	(022) 65288597
	Maharashtra	Mumbai	Jeeves Consumer Services Pvt Ltd.	Shop No.1-1A, Ground floor, Kirti Co-Op Housing Society, Ramachandra Extn Lane, Near Movie Time, Evershine Nagar, Malad(W), Mumbai-400064	Murali Joshi	(022) 65278590
	Maharashtra	Pune	Jeeves Consumer Services Pvt Ltd.	No. 337, Sai Leela, 1st Floor, Datt Wadi, Mhasoba Chowk, Pune - 411030	Saket Dubey	(020) 24321679
	Maharashtra	Nagpur	Technic Services	Khare Building, Hanuman Lane, Sitabuildi, Nagpur - 440 012	Dilip Panda	(0712) 2550076
	Maharashtra	Chandrapur	Suvidha Electronics	No. 1, Devt Appartment, Church Road, Hanuman Nagartukum, Chandrapur - 442401	Subash Deashkar	(07172) 258966 / 256453
	Maharashtra	Kolhapur	Sikir Mobiles	1492 C Ward, Laxmipuri, Opp. TATA Brand Stores, Kolhapur - 416001	Sukir Bakare	(0) 9372555011
	Maharashtra	Aurangabad	Emperor Services	S-5,Manik Arcade Kalda Corner, Opp Chowbey Hospital, Chetna Nagar, Aurangabad -31005	Mr. Willy Bento Colaco	(0240) 2350606
	Maharashtra	Nashik	Harsha Electronics	3, Talak Complex, Rachna Vidyalaya Road, Sharanpur Roda, Nashik - 422002	Pravin Patil	(0) 9422254240
	Goa	Salcete	Jolly Enterprises	Shop # G-2, 78/A Nuvem Enclave, Along NH-17 Highway, Belloy Nuvem, Salcete - 403604	John Gonzanalves	(0832)2791800
	Gujarat	Ahmedabad	Jeeves Consumer Services Pvt Ltd.	No. 37, Om Tower, Near Star Bazar, Jodhpur Cross Road, Satellite, Ahmedabad - 380015	Girish Parmar	(079) 40080485
	Gujarat	Baroda	Uday Refrigeration	G/3 Nandanvan Comples, Atma Jyoti Ashram Road, Behind Citizen Society, Ellora Park, Baroda	Shailesh	(0265) 6590948
	Gujarat	Surat	Sadgurudev	Shop No. L/6, Shankutal Complex, Beside Sangvi Tower, Near Gujarat Gas Circle, Adajan Patia, Surat - 395009	Manoj Rana	(0261) 6540417
	Gujarat	Rajkot	PC Systems	4-Sardar Nagar (West),Tagore Road, Near Astron Circle, Rajkot-360001	Manoj Gohil	(0281) 2480479
	Madhya Pradesh	Indore	Cool Home Refrigeration	LG-70, Trade Centre, 18, South Tukogunj, Indore- 452 001	Husain Anjum	(0731) 4076404
	Madhya Pradesh	Bhopal	Jeeves Consumer Services Pvt Ltd.	Ward no 47, Goyal Vihar, Ground floor, Flat no-G-1, 31-C, Zone-2, MP Nagar, Bhopal	Ram Ashish Prasad	(0755) 4059310

AUTHORIZED SERVICE CENTERS

South	Tamil Nadu	Chennai	Jeeves Consumer Services Pvt Ltd.	New No.3,Old No.1-A, Sripuram,2nd Lane,Royapetah, Chennai-600014	Dinesh Kumar	044-42632371
	Tamil Nadu	Chennai	G C Services	Old No. 12, New No. 37, 1st Floor, Sattanna Naichen Street, Nehru Timber Market, Choolai, Chennai - 600112	Naval R	(044) 26690084 / 42822868
	Tamil Nadu	Coimbatore	V K Engineering	108-A/92, West Ponnurangam Road, Ground Floor (Near Telephone Exchange), R.S.Puram, Coimbatore - 641002	Selvadurai	(0422) 2541172
	Pondicherry	Pondicherry	Bestronics	49, Saint Theresa Street, Pondicherry - 605001	B Jayashankar	(0) 9443728020
	Andhra Pradesh	Hyderabad	Jeeves Consumer Services Pvt Ltd.	Flat No. 205, Karan Centre, Opp. IBP Petrol Pump and Karan Hotel, Park Lane, S.D.Road, Near Paradise Circle, Secunderabad - 500003	Kumararajan	(040) 64591168
	Andhra Pradesh	Vijaywada	Jeeves Consumer Services Pvt Ltd.	Door No.25-10-10A,G.S.Raju Road,Gandhi Nagar, Near Gymkhana Road, Vijayawada - 520003	Rahamatullah Gouse Khan	(0866) 6591168
	Karnataka	Bangalore	Jeeves Consumer Services Pvt Ltd.	No. 126, 1st Floor, 8th Main J.P.Nagar, 3rd Phase, Bangalore - 560078	Ramesh Kumar	(080) 41209331
	Karnataka	Bangalore	Jeeves Consumer Services Pvt Ltd.	First Floor, Khan Bldg, 7 & 8th Cross, Jakkasandra Extension, Bangalore - 560032	Surulivel	(080) 25520424
	Karnataka	Mangalore	Jeeves Consumer Services Pvt Ltd.	1st Floor, Quadra compound, Bejai,kapikad, Kavoor Road, Mangalore -575004	Divakar Shetty	(0824) 2213699
	Karnataka	Mysore	Jeeves Consumer Services Pvt Ltd.	No.1095, 1st Floor, C&D Block, Lalithadri Road, Kuvempunagar, Mysore - 570023	Venkatesh.S.Kulkarni	(0821) 4191094

2612_2616_2616WA-049_14EM1.indd 12-13 9/12/14 11:50 AM